


# ST812 FLOOD DETECTOR

These instructions should be read in conjunction with your System Installation and Operating Manual and be retained for future reference.

## Product Layout

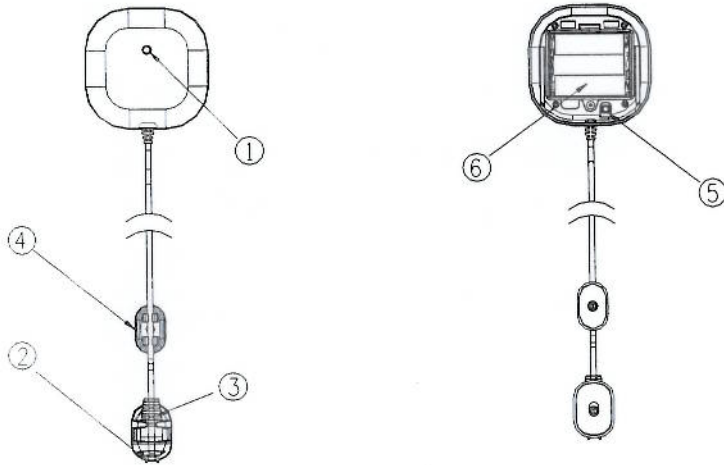

- ① Two-color Indication LED (red & green)
- ② Flood Sensor
- ③ Sensor Rack
- ④ Flood Sensor Cable Rack
- ⑤ Link Key
- ⑥ Battery Compartment

## Introduction

The Flood Detector is a Z-Wave™ enabled device and is fully compatible with any


Z-Wave™ enabled network. Z-Wave™ enabled devices displaying the Z-Wave™ logo can also be used with it regardless of the manufacturer, and ours can also be used in other manufacturer's Z-Wave™ enabled networks. Inclusion of this Flood Detector on other manufacturer's Wireless Controller menu allows remote turn-on of connected modules and their connected lighting when the Detector is triggered. Z-Wave™ nodes in the system also act as repeaters if they support that function.

The Flood Detector consists of a transceiver, flood sensor and 3-meter flood sensor cable. Protect your property from water damage! The Flood Detector is designed to sense the presence of water in basements, yachts and many others residential and commercial applications, providing early warning of developing floods. The Flood Detector is designed so that the transceiver is mounted on the wall and the flood sensor is placed in a location where water presence, such as a result of leakage or flooding, is probable. Upon flood detection, the Detector will beep and flash and report its status to the node ID. Once water is released, it will report to the node ID as well.


The Flood Detector is powered by 3 x AA 1.5V alkaline battery. When battery level drops below unacceptable level, the Detector flashes red LED once every 30 seconds and reports low battery status to the node ID. When this occurs, the batteries should be replaced as soon as possible.

## Power Up

1. Undo and remove the screw from the bottom edge of the transceiver. Remove the back cover.

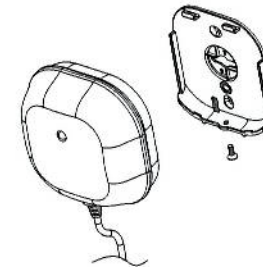

2. Unscrew the screw from the battery cover and remove the battery cover.
3. Fit 3 AA size 1.5V batteries to the battery spring.

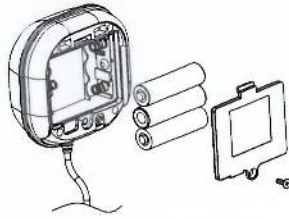

4. Refit the battery cover by fastening its screw.

### Include to or Exclude from a Z-Wave™ Network

In the rear casing, there is a link key which is used to carry out inclusion, exclusion, reset or association. When first power is applied, its two-color LED flashes on and off alternately and repeatedly at 2-second intervals. It implies that it has not been assigned a node ID and cannot work with Z-Wave enabled devices. Please get familiar with the terms below before starting the operations.

| Function    | Description   |
|-------------|---|
| Inclusion   | Add a Z-Wave enabled device (e.g. Flood Detector) to Z-Wave network.  |
| Exclusion   | Delete a Z-Wave enabled device (e.g. Flood Detector) from the network.  |
| Association | After inclusion, you have to define the relationship between devices. Through association, device can be assigned as master/slave, and specify which slave is going to be controlled by which master. |
| Reset       | Restore Flood Detector to factory default.  |

The table below lists an operation summary of basic Z-Wave functions. Please refer to the instructions for your Z-Wave™ Certificated Primary Controller to access the setup function, and to include/exclude/associate devices.

| Function   | Description  | Audible & Visual Indication                  |
|------------|--|--|
| No node ID | The Z-Wave Controller does not allocate a node ID to the Detector.   | 2-second on, 2-second off                    |
| Inclusion  | 1. Have Z-Wave Controller entered inclusion mode.  | Beep once whenever link key is pressed once. |
|            | 2. Pressing link key three times within 1.5 second will enter inclusion mode. The detector will stay "awake" for 10 minutes to allow time for setting and device status enquiring. |  |


| Function  | Description   | Audible & Visual Indication                  |
|---|---|--|
| Exclusion   | 1. Have Z-Wave Controller entered exclusion mode.   | Beep once whenever link key is pressed once. |
|   | 2. Pressing link key three times within 1.5 second will enter exclusion mode. The detector will stay "awake" for 10 minutes to allow time for setting and device status enquiring.  |  |
| Reset   | 1. Press link key three times within 1.5 second. The detector will stay "awake" for 10 minutes to allow time for setting and device status enquiring.   | Beep once whenever link key is pressed once. |
|   | 2. Within 1 second, press and hold the link key until beep tone stops.  | Long beep for 5 seconds                      |
|   | 3. IDs are excluded and all of preset value will be reset to factory default.   | 2-second on, 2-second off                    |
| Association   | 1. Have Z-Wave Controller entered association mode.<br>Or Pressing link key three times within 1.5 second will enter association mode. The detector will stay "awake" for 10 minutes to allow time for setting and device status enquiring. | Beep once whenever link key is pressed once. |
|   | 2. There are two groupings - 1 and 2. Refer to Z-Wave's Groups as described on page 3 & 4.  |  |
| ※Including a node ID allocated by Z-Wave Controller means inclusion. Excluding a node ID allocated by Z-Wave Controller means exclusion.<br>※Failed or success in including/excluding the node ID can be viewed from the Z-Wave Controller. |   |  |

### Installation

A clean smooth surface is required to mount the Flood Detector securely. The length of flood sensor cable is 3 meters. If a 3-meter cable is too long, roll up the cable and fasten it by twist ties. The transceiver should be placed as high up as possible on the wall to improve communication and to prevent it from coming into contact with water in case of flooding. After completion of battery insertion and set up, follow the below procedures:



1. Attach the flood sensor near the floor.
2. Use the back cover, flood sensor cable rack and sensor rack as a template to mark the position of fixing holes on the wall. Drill the holes and insert the plastic wall plugs supplied respectively.

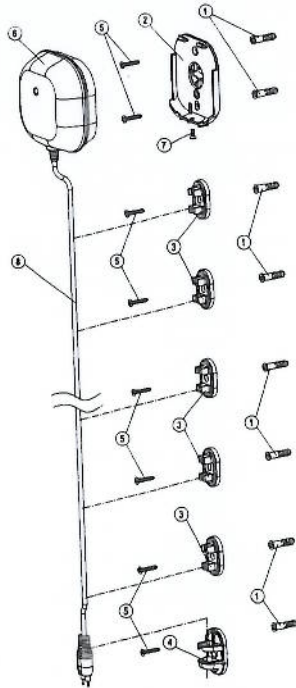

3. Fix the back cover, flood sensor cable rack and sensor rack using the fixing screws provided.
4. Refit the transceiver to the back cover and secure with the fixing screw supplied.
5. Place the flood sensor cable and flood sensor to its rack.

**Note:** The transceiver should never be submerged in water.

## Programming

### 1. Z-Wave's Groups (Association Command Class Version 2)

The Flood Detector supports two association groups with one node support for Grouping 1 and three nodes support for Grouping 2. This has the effect that when the

Detector is triggered, all devices associated with the Detector will receive the relevant reports.

There are two kinds of reports: ALARM\_REPORT and SENSOR\_ALARM\_REPORT.

#### 1-1 Grouping 1 (Max. node 1)

##### 1-1-1 Power Applied command

The Detector will send ALARM\_REPORT command to the nodes of Grouping 1 to inform the devices that the Detector is powered up.

**ALARM\_REPORT Command:**

**[Command Class Alarm, Alarm Type = 0x02, Alarm Level = 0x01]**

##### 1-1-2 Flood Event Report (Binary Sensor Report)

Once the Detector has been triggered by water, the Detector will send SENSOR\_ALARM\_REPORT to the nodes of Grouping 1 to inform them there is a flood event; meanwhile, its red LED will flash for one minute and beep for 30 seconds. Wait till water is released, SENSOR\_ALARM\_REPORT will be sent to the associated devices.

**SENSOR\_ALARM\_REPORT Command:**

Event Present:

**[Command Class Sensor Alarm, Sensor Alarm Report, Sensor Type Water Leak Alarm State = 255 (0xFF), Seconds = 0x00]**

Event Clear:

**[Command Class Sensor Alarm, Sensor Alarm Report, Sensor Type Water Leak Alarm State = 0x00(0), Seconds = 0x00]**

##### 1-1-3 Low Battery Report (Alarm Command Class)

When the battery level of the Detector drops to an unacceptable level, the Detector will send a low battery command to the node of Grouping 1; meanwhile, the Detector will flash red LED once every 30 seconds.

**ALARM REPORT Command:**

**[Command Class Alarm, Alarm Type = 0x01, Alarm Level = 0xFF]**

#### 1-2 Grouping 2 (Max. nodes 3)

##### 1-2-1 Control other Z-Wave devices

When the Detector has been triggered, it will control other Z-Wave devices for operation by sending Basic Set command to the nodes of Grouping 2; meanwhile, the Detector will flash red LED for one minute and beep for 30 seconds.

|   |
|---|
| Basic Set Command:<br>Event Present:<br>[Command Class Basic, Basic Set, Value = Basic set level] |
| Event Clear:<br>[Command Class Basic, Basic Set, Value = 0x00(0)]                                 |

## 2. Z-Wave's Configuration

### 2-1 Basic Set Level

When Basic Set Command is sent where contains a value, the receiver will take it for consideration; for instance, if a lamp module is received the Basic Set command of which value is decisive as to how bright of dim level of lamp module shall be.

Example:

0: OFF

1-99: ON (Binary Switch Device)

Dim Level (Multilevel Switch Device)

| Function        | Parameter Number | Size | Range | Default |
|-----------------|------------------|------|-------|---------|
| Basic Set level | 1                | 1    | 0~99  | 99      |

Configuration Command

## 3. Advanced Programming

### 3-1 Low Battery Indication

The users can also enquire the battery status of the Detector by sending BATTERY\_GET command via Z-Wave Controller. Once the Detector receives the command, it will return BATTERY\_REPORT command. The Detector will send Battery\_Level = 255 (0xFF) command to the Z-Wave Controller to inform that the Detector is in low battery status.

BATTERY\_REPORT Command:

[Command Class Battery, Battery Report, Battery Level = 20%-100%]

### 3-2 Wakeup Command Class

The unit stays in sleep status for the majority of time in order to conserve battery power. However, it can be woken up at specified intervals by setting WAKE\_UP\_INTERVAL\_SET command by Z-Wave Controller. After the unit wakes up, it will send Wakeup Notification Command to the node ID that requires to be reported. The minimum and maximum wakeup interval is 60 seconds and 194 days respectively. Allowable interval among each wakeup interval is 1 second, such as 60, 61, 62 ....

## 4. Command Classes

The Flood Detector supports Command Classes including...

\*COMMAND\_CLASS\_SENSOR\_BINARY  
 \*COMMAND\_CLASS\_BASIC  
 \*COMMAND\_CLASS\_CONFIGURATION  
 \*COMMAND\_CLASS\_WAKE\_UP\_V2  
 \*COMMAND\_CLASS\_MANUFACTURER\_SPECIFIC  
 \*COMMAND\_CLASS\_VERSION  
 \*COMMAND\_CLASS\_ASSOCIATION\_V2  
 \*COMMAND\_CLASS\_BATTERY  
 \*COMMAND\_CLASS\_SENSOR\_ALARM

## Operation

1. When water is detected, the Detector flashes red LED for one minute and beeps for 30 seconds as maximum during which an event report will be sent to the node ID. In normal mode, the detection interval is set for one minute. If the Detector is triggered, it will not be triggered again until one minute has elapsed, thus avoiding false trigger.
2. When water is released, the green LED on the Detector will illuminate once.
3. When the battery level on the Detector drops to a certain level, the red LED will flash once every 30 seconds and an event report will be sent to the node ID.



## Troubleshooting

| Symptom   | Possible Cause   | Recommendation   |
|---|--|--|
| LED not indicating and working                      | Batteries have not been fitted or insufficient battery power | Check out if batteries are fitted or replace new batteries |
|   | Break down   | Do not open up the Detector and send it for repair         |
| No beep sound and LED not indicating when triggered | Not carry out inclusion                                      | Include a node ID allocated by Z-Wave Controller           |

## SPECIFICATION

|                     |   |
|---------------------|---|
| Battery Type        | 1.5V AA x 3 pieces                        |
| Battery Life        | About 1 year, @25°C standby mode          |
| Operating Frequency | 868.42MHz (ST812-1) / 908.42MHz (ST812-2) |
| ZDK Version         | V5.02                                     |



A501111533R

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### WARNING:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new once, the retailer is legally obligated to take back your old appliance for disposal at least for free of charge.