

ZRC-100 (Z-Wave Remote Controller)



Table of Contents

Introduction	4
Glossary	5
ZRC-100 Operations	6
Product Overview	7
Description of Function Keys	7
ZRC-100 User Interface Layout	8
Operations	10
Add/Delete Devices	11
Device Control	14
Scene Setup	15
Scene Control	18
Comfort Control	19
Sensor Information	20
Device Configure	20
Scene Configure	23
Comfort / Sensor Configure	25
Shortcut Key	27
Z-Wave Advanced Setup	29
Learning Mode	29
Configure Association	31
Change Device Configuration	37
Resetting Your Network	39
System Settings	40
About ZRC-100	42
Z-Wave Network Setup	43
Rediscover Network	43
Re-scan (Rediscover) Devices from network	44
Delete Dead Node from Network	46
Listening Mode	
Create a Secondary Controller	48
Create a Primary Controller	49
WIRELESS INFORMATION	51
MAINTENANCE	51
FREQUENTLY ASKED QUESTIONS	51
Z-Wave Frequently Asked Questions	51

TECHNICAL SPECIFICATIONS	56
CHECKING THE ACCESSORIES	57
FCC NOTICE	57
WARNINGS	57
CAUTION	58

ZRC-100 (Z-Wave Remote Controller) Operating Instructions

Introduction

The ZRC-100 (Figure 1) is a portable Z-Wave remote controller with multi-channel support; also it is a Z-Wave Enabled Security Controller. It can control the secured door locks when it is in the security network. Also, it can be configured as a primary or secondary controller within a Z-Wave home automation network. It works with almost every Z-Wave enabled devices, binary switches, dimmers, thermostats, secured door locks, binary or multi-level sensors. Users can control their Z-Wave enabled devices individually or through "Scene" control. Scene is a collection of Z-Wave devices configured to a user-preferred settings, levels, modes or operating conditions. The ZRC-100 also equipped with a backlit LCD screen and an intelligent <u>Self Navigated Button (SNB) system</u>. Users can setup and operate their Z-Wave devices through the LCD and the SNB system using their ZRC-100, and enjoy a networked, wireless home automation system anywhere at home.



Figure 1 ZRC-100

Glossary

	Devices and nodes are all terms to describe
	an individual Z-Wave device. These are all
Device or Node	interchangeable when setting up your Z-
	Wave network.
x	
Inclusion	Add a Z-Wave device to the network.
Exclusion	Delete a Z-Wave device from the network.
	To take a device out of a group, scene or
Remove	association group while that device still
	exists in the same Z-Wave network.
	A collection of Z-Wave devices controlled
	by primary and secondary controllers
Z-Wave	operating on the same system. A Z-Wave
Network	network has its own unique ID code so that
	controllers not in the network cannot control
	the system.
	The first controller used to set up your
	devices and network. Only the Primary
Primary	Controller can be used to include or delete
Controller	modules from a network. It is recommended
	that you mark the primary controller for each
	network for ease in modifying your network.
	A controller containing network information
	about other modules within the network and
Secondary	is used for controlling devices. Secondary
Controller	controller is created from the Primary
	Controller and cannot include or delete
	modules to the network.
	A controller containing network information
	about other modules within the network and
Inclusion	is used for controlling devices. Inclusion
Controller	controller is created from the Primary
Controller	Controller in a SIS enabled Z-Wave network.
	Inclusion Controller has the ability to add
	and remove devices from the network.
	A collection of Z-Wave devices configured
	to turn to a specific level, setting, mode, or
Scene	perform an operation. Scenes are usually
	activated by a controller, timed event, or
	specific conditions.

ZRC-100 Operations

Welcome to the world of Z-Wave home automation, you can use your ZRC-100 to control almost every Z-Wave certified products inside your house. The following section will guide you through the set up processes and operation procedures for your ZRC-100.

Please note that all Z-Wave devices, light switches, dimmers, shutter switches, thermostat and secured door lock made from various vendors are compatible with your ZRC-100 as long as they are Z-Wave certified or carry the following Z-Wave logo:



(Please carefully read through the following sections of this user manual and store for future reference.)

Before using the ZRC-100, please install the batteries:

- 4xAAA batteries are required for operation.
- Remove the battery cover on the back of your remote.
- Check the polarity of the batteries and the "+/-" marks inside the battery compartment.
- Insert the batteries.
- Push the battery cover back in place.

• CAUTION (battery safety)

- Use new batteries of the recommended type and size only.
- Never mix used and new batteries together.
- To avoid chemical leaks, remove batteries from the remote controller if you do not intend to use the remote for an extended period of time.
- Dispose of used batteries properly; do not burn or bury them.

Product Overview

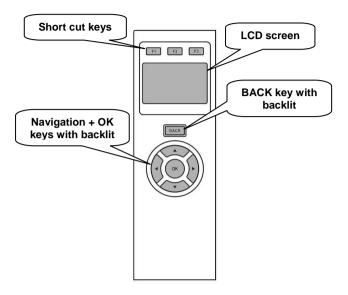



Figure 2 Setup and control keys of ZRC-100

Description of Function Keys


Keys	Functions	
F1 F2 F3	 Short cut keys for: Device and scene control Short cut to user selected control menu 	
BACK	Back to previous screen	
	4-way directional keys for setup and control OK key for confirmation	

ZRC-100 User Interface Layout


Control menu	or	 Press ▲ or ▼ keys to select control category. Press BACK key to go back to previous page. Press and hold BACK key for 2 seconds to go back to root menu.
-----------------	----	--

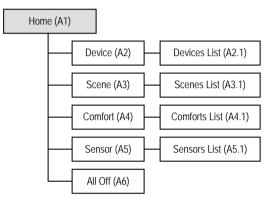

Setup menu	0	+	 Press and hold < ► keys simultaneously for 3 seconds to enter Setup menu. Press BACK key to go back to previous page. Press and hold BACK key for 2 seconds to go back to root menu.
---------------	---	---	---

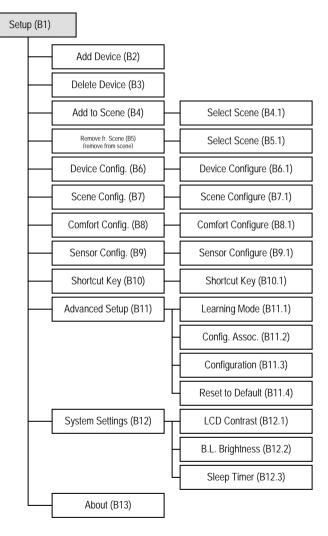

Network Setup menu	+	 Press and hold ▲ ▼ keys simultaneously for 3 seconds to enter Network Setup menu. Press BACK key to go back to previous page. Press and hold BACK key for 2 seconds to go back to root menu.
--------------------------	---	--

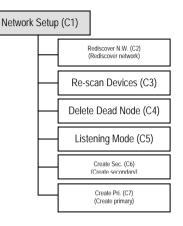

Operations

The ZRC-100 remote controller can be set up as a Primary or Secondary Controller within a Z-Wave network.

The ZRC-100 can control Z-Wave devices individually or as a group using Scene or Association. A single Z-Wave network can include 232 nodes. If necessary, more than one network can be bridged to extend the number of nodes supported, although this is normally not needed in a residential environment.

ZRC-100 control capability		
Total number of controllable	128 items	
End-point (EP) / device / sensor	(listed on the "Device" and "Sensor" page)	
Total number of thermostats	6 thermostats	
	(listed on the "Comfort" page)	
Total number of scenes	12 scenes (listed on the "Scene" page)	
Each Scene supports up to	32 Z-Wave devices or End-point (EP)	

Ð


Remark:

- The hard keys are valid if the backlit is turned on and vise versa. User can follow the <u>Self Navigated Button (SNB)</u> and LCD display for all setup procedures and operation.
- User can press "BACK", key to go back to the previous page or press and hold "BACK", key for 2 seconds to go back to the root menu at any setup /operation screen.

Add/Delete Devices

Adding Device to the Network

Step	Setup Key	LCD Indication
1	Press and hold Press and hold Press simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter U Setup Common Add Device > Delete Device > Add Device > Delete Device > Add to Scene > OK to Enter OK to Enter
2	Select "Add Device".	Setup Add Device Delete Device Add to Scene OK to Enter
3	Press key to add the device into Z-Wave network.	Add Device Press PROG on target

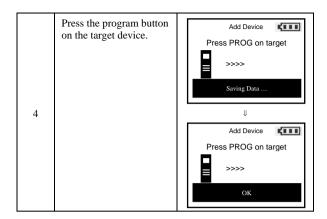

Note 1: If you can't add your Z-Wave device, this device might have been included in another Z-Wave network. In this case, please delete this device following the steps in the [Deleting Device from the Network] section then add this device again.

Note 2: This step can be skipped if the device is already included in the network.


Note 3: In a Z-Wave network, only the primary controller or inclusion controller can add or include devices into its network. If ZRC-100 is configured as a secondary controller, it will report "Error" if users attempt to use ZRC-100 to add a device into its network.

Note 4: If no ACK signal received for more than 60 seconds, the "Add Device" mode will exit automatically.

Step	Setup Key	LCD Indication
1	Press and hold Press and hold Press simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter

മ

Deleting Device from the Network

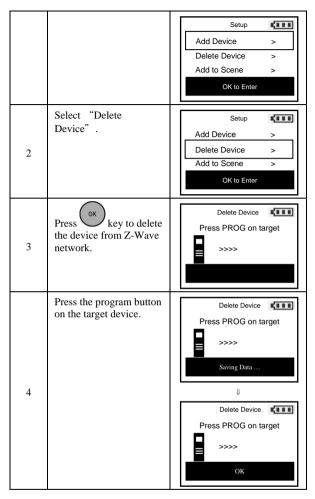

Note 1: If no ACK signal received for more than 60 seconds, the "Delete Device" mode will exit automatically.


Note 2: In a Z-Wave network, only the primary controller or inclusion controller can delete or exclude devices into its network. If ZRC-100 is configured as a secondary controller, it will report "Error" if users attempt to use ZRC-100 to delete a device from its network.

B

Device Control

After adding devices to your ZRC-100, you can turn the device using the corresponding Device Control function.

Step	Setup Key	LCD Indication
1	Select "Device" and press of key to confirm. A corresponding Device control page will be displayed.	Home ↓ Device > Scene > Comfort > OK to Enter ↓ Devices List ↓ Switch 001 Off ↓ ↓ ↓ ↓
2	For on/off switches, press ► key to turn on the device and ◀ key to turn off the device.	Devices List Switch 001 Off Dimmer 002 Off ◆ Off and On ►
3	To operate dimmer and motorized curtain: Press and hold the ► key until reach to your desired level and release the key to open the curtain or to increase the dimmer intensity. Press and hold the ► key until reach to your desired level and release the key to retract the curtain or to reduce the dimmer intensity.	Devices List Switch 001 Off Dimmer 002 Off ✓ Off and On ►

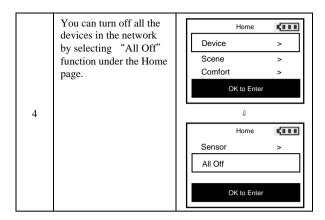

Note 1: The screen will display LOCK /UNLK if this is a secured door lock device.

Note 2: You can rename your device, please refer to user manual [step of B6 - Device Config.].

Scene Setup

Scene is a collection of Z-Wave devices configured to user specified levels, settings, modes, or operating conditions. Scenes are usually activated by a controller, timed event, or specific conditions. For example, a user prefers to set the dimmer to a low intensity level and close the motorized curtain when he watch movie. He can define a scene to control the dimmer and motorized curtain using a single scene command.

You can control up to 12 scenes (Scene On/Off) with your ZRC-100. Each Scene supports up to 32 Z-Wave devices or <u>End-Point (EP)</u>.

Adding Device/End-point to a Scene

Step	Setup Key	LCD Indication
1	Press and hold Press and hold Press simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter

ന

		Ų
		Setup LIII
		Add Device >
		Delete Device >
		Add to Scene >
		OK to Enter
	Select "Add to Scene"	Setup 4
2	and press 💛 key.	Delete Device >
2		Add to Scene >
		OK to Enter
		OK to Enter
	Select a Scene which	Select Scene
	you want to add the	
	device into Scene and	Scene 1 Scene 2
3	ОК	Scene 2 Scene 3
	press V key.	
		OK to Enter
	Press the program button	Add Device
	on the target device.	Press PROG on target
4		Ų
		Add Device
		Press PROG on target
		= >>>>
		OK
	Adjust the target device	Add Device
5	on/off or dim level with	
	its program button, to the	Set Desired level
	desired level.	>>>>
		OK to Save
1		


Note 1: Your target device must be included in the network before this setup procedure, please refer to [Adding Device to the Network] section.

Note 2: If no ACK signal received for more than 60 seconds, the "Add Device" mode will exit automatically.

Step	Setup Key	LCD Indication
1	Press and hold Press and hold Press simultaneously for 3 seconds under the Home page.	Home Image: Composition of the second s
2	Select "Remove from Scene" and press	Setup Remove fr. Scene Device Config. Scene Config. OK to Enter
3	Select a Scene which you want to delete the device from Scene and press OK key.	Select Scene Content Scene 2 Scene 3 OK to Enter
4	Press the program button on the target device.	Remove Device Press PROG on target

Removing Device/End-point from a Scene

Ð

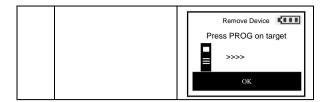

Note 1: This process will only remove the target device/EP from its assigned scene but will not exclude it from the network.

Note 2: If no ACK signal received for more than 60 seconds, the "Remove Device" mode will exit automatically.

Scene Control

After the scene setup is done, you can trigger the desired scene via scene control function on ZRC-100.

Step	Setup Key	LCD Indication
1	Select "Scene" and press key to confirm. A corresponding Scene Control page will be displayed.	Home ↓ Device > Scene > Comfort > OK to Enter ↓ Scenes List ↓ Scene 1 Scene 2 Scene 3 ↓ Off and On ►
2	Select your Scene and press ▶ key to turn on the Scene and ◀ key to turn off the Scene.	Scenes List Scene 1 Scene 2 Scene 3 ◀ Off and On ►

Comfort Control

After adding "Thermostat" or "Z-Wave to AC IR extender" to your ZRC-100, you can change the operation mode, set target temperature and fan speed via the corresponding Comfort Control function.

Step	Setup Key	LCD Indication
1	Select "Comfort" and press key to confirm. A corresponding Comfort Control page will be displayed.	Home ↓ Device > Scene > Comfort > OK to Enter ↓ Comforts List ↓ Thermostat003 > OK to Enter
2	Select your Thermostat and press key to entry the Thermostat control page.	Thermostat003 Mode Cool Target Temp. 75°F Fan Speed A_Lo < Control ►
3	Use keys to switch the operation mode, set target temperature or fan speed.	Thermostat003 Mode Heat Target Temp. 68°F Fan Speed A_Lo ◀ Control ►

Sensor information

After adding "Binary Sensor / Multi-level Sensor" to your ZRC-100, you can monitor the sensor temperature via the corresponding Sensor function.


Step	Setup Key	LCD Indication
	Select "Sensor" and press key to confirm.	Home Sensor > All Off
	A corresponding Sensor page will be displayed.	OK to Enter
1		Ų
		Sensors List
		Sensor 003 75

Device Configure

It is allow to Move/Rename/Delete the device after added into the network under the Device Configure function.

Step	Setup Key	LCD Indication
	Press and hold ◀ ► keys simultaneously for 3 seconds under the Home page.	Home The Point Poi
1		Setup Add Device > Delete Device > Add to Scene > OK to Enter

2	Select "Device Configure" and press	Setup Image: Constraint of the setup Remove fr. Scene > Device Config. > Scene Config. > OK to Enter
3	Select your "Device" and press or key.	Device Configure Dimmer 002 > Dimmer 004 > OK to Enter
4	Select your action (e.g. Move) and press	Edit Move Rename Delete OK to Execute
5	Move your selected device to your target position and press to save the setting.	Move Dimmer 002 Dimmer 004 OK to Save ↓ Move Dimmer 004 > Dimmer 004 > Dimmer 002 > OK to Save
6	Select your action (e.g. Rename) and press	Edit Move Rename Delete OK to Execute

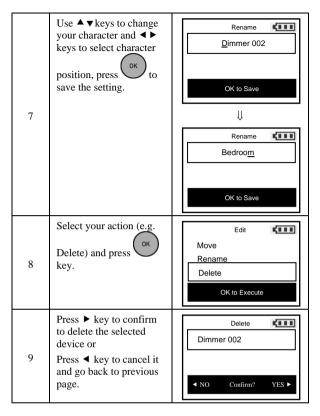

Note 1: ZRC-100 supports up to 16 characters in a row for the device name.


22

Note 2: This process will only remove the devices/EPs from its catalogue but will not exclude it from the network.

Scene Configure

It is allow to Move/Rename/Clear the scene after added into the scene under the Scene Configure function.

Step	Setup Key	LCD Indication
1	Press and hold ∢ keys simultaneously for 3 seconds under the Home page.	Home ↓ Device > Scene > Comfort > OK to Enter ↓ Setup ↓ Add Device > Delete Device > Add to Scene > OK to Enter
2	Select "Scene Configure" and press	Setup Remove fr. Scene Device Config. Scene Config. OK to Enter
3	Select your "Scene" and press ok key.	Scene Configure Configure Scene 1 Scene 2 Scene 3 OK to Enter
4	Select your action (e.g. Move) and press	Edit Move Rename Clear OK to Execute

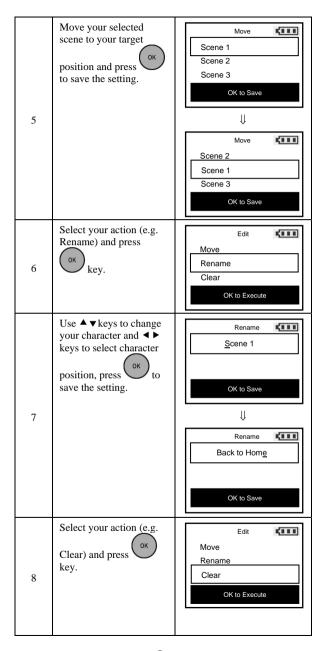

 Press ► key to to clear the sele scene or 9 Press ◄ key to and go back to page. 	cancel it
--	-----------

Note 1: ZRC-100 supports up to 16 characters in a row for the scene name.

Note 2: This process will only remove the scene devices/EPs from its assigned scene but will not exclude it from the network.

Note 3: The above steps are needed if ZRC-100 to be a secondary remote controller and the Scene information mapping from gateway / primary controller is unsuccessful.


Comfort / Sensor Configure

It is allow to Move/Rename/Delete the device after added into the network under the Comfort / Sensor Configure function.

Step	Setup Key	LCD Indication
1	Press and hold ◀ ► keys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter
2	Select "Comfort Configure" and press	Setup Comfort Config. Sensor Config. Shortcut Key OK to Enter

25)

	Select your "Thermostat" and	Comfort configure
	\frown	Thermostat003 >
3	press ok key.	Thermostat005 >
		OK to Enter
	Select your action (e.g.	Edit (111
	Move) and press	Move
4	key.	Rename
		Delete
		OK to Execute
	Move your selected Thermostat to your	Move
	target position and press	Thermostat003
	ОК	Thermostat005
	to save the setting.	OK to Save
5		
5		Move
		Thermostat005
		Thermostat003
		OK to Save
	Select your action (e.g. Rename) and press	Edit (111
		Move
6	key.	Rename Delete
		OK to Execute
	Use ▲ ▼ keys to change your character and ◀ ►	Rename
	keys to select character	Thermostat003
	position, press OK to	
7	save the setting.	OK to Save
		\Downarrow
L	I	1

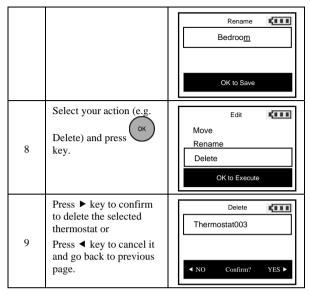

Note 1: ZRC-100 supports up to 16 characters in a row for the scene name.

Note 2: This process will only remove the devices/EPs from its catalogue but will not exclude it from the network.

Shortcut key

ZRC-100 provides a shortcut key which can jump to your target Comfort / Sensor device or turn On/Off your device/ Scene.

Step	Setup Key	LCD Indication
1	Press and hold ∢ ► keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter ↓

		Setup
		Add Device >
		Delete Device >
		Add to Scene >
		OK to Enter
2	Select "Shortcut key" and press or key.	Setup Comfort Config. > Sensor Config. > Shortcut Key >
	Select your target	OK to Enter
3	shortcut key by ◀► keys (e.g. F1) then press	FI F2 F3
4	Select your target Device / Scene / All Off for your shortcut key or Select your target shortcut page (Comfort / Sensor) for your shortcut key.	Select Image: Composition of the select Device > Scene > Comfort > OK to Enter
5	Select a Device or Scene to this shortcut key then press or key.	Select Contract Switch 001 Dimmer 002 OK to Save
6	Press F1 key to turn On your Device or Scene at any page or Press and hold F1 key to turn Off your Device or Scene at any page. (Press your shortcut key can jump to your target Comfort / Sensor device)	Home Device > Scene > Comfort > OK to Enter

Z-Wave Advanced Setup

Learning Mode

(Replicating All Network and Device Information from a Primary Controller to your ZRC-100)

Your ZRC-100 can:

- Copy the settings from another Z-Wave controller.
- Be included into existing Z-Wave network and <u>act as a secondary</u> remote controller or back to a new primary remote controller.
- Be excluded from the Z-Wave network.

Step	Setup Key	LCD Indication
1	Place the two controllers close to each other.	-
2	Press and hold ◀ ► keys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter
3	Select "Advanced Setup" and press	Setup Image: Constraint of the setup Advanced Setup > System Settings > About > OK to Enter
4	Select "Learning Mode" and press key. Please make sure the primary controller is setup to send information. (Refer to	Advanced Setup

29)

	the primary controller user manual for more information)	
5	Place the two controllers close to each other. (LCD display <u>OK</u> if the learning mode is successful. LCD display <u>ERROR</u> if the learning mode is unsuccessful.)	Learning Mode Learning Learning Learning Mode Learning Learning Mode Learning Learning S>>> OK

O CAUTION

Scene Controller Configuration Command and Association Command

If scenes are copied to a secondary controller using the replication function, those scenes cannot be modified using the Scene Controller Configuration and Association Commands. If modifications are desired, it is recommended to delete all these scenes from the controller prior to using the two aforementioned commands.


Configure Association (Assign Association for Two Devices)

The ZRC-100 can be used to assign one device to automatically interact directly with another device.

For example you can assign a door sensor (primary node) to turn on the light switch (secondary node) when the door is opened.

Step	Setup Key	LCD Indication
1	Press and hold ∢ keys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter
2	Select "Advanced Setup" and press	Setup Advanced Setup System Settings About OK to Enter
3	Select "Config. Assoc." and press	Advanced Setup
4	Select "Add Assoc." and press or key.	Config. Assoc. > Add Assoc. > Remove Assoc. > Delete Assoc. > OK to Enter


Adding Device/End-point to an Association Group

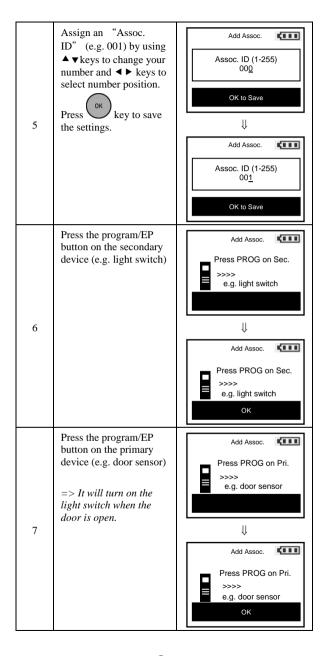

Note 1: Your target device must be included in the network before this setup procedure, please refer to [Adding Device to the Network] section.

Step	Setup Key	LCD Indication
1	Press and hold ∢ keys simultaneously for 3 seconds under the Home page.	Home Image: Composition of the second s
2	Select "Advanced Setup" and press	Setup Advanced Setup System Settings About OK to Enter
3	Select "Config. Assoc." and press	Advanced Setup Learning Mode Config. Assoc. > Configuration > OK to Enter
4	Select "Remove Assoc." and press	Config. Assoc. > Add Assoc. > Remove Assoc. > Delete Assoc. > OK to Enter


Removing Device/End-point from an Association Group

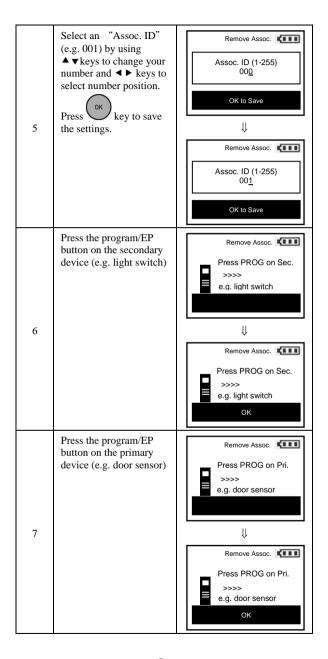

Note 1: This process will only remove the target device/EP from its assigned association group but will not exclude it from the network.

Deleting an Association Group

Step	Setup Key	LCD Indication
1	Press and hold ◀ ► keys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter
2	Select "Advanced Setup" and press	OK to Enter Setup Advanced Setup System Settings About OK to Enter
3	Select "Config. Assoc." and press	Advanced Setup Learning Mode Config. Assoc. > Configuration > OK to Enter
4	Select "Delete Assoc." and press	Config. Assoc. Add Assoc. > Remove Assoc. > Delete Assoc. > OK to Enter

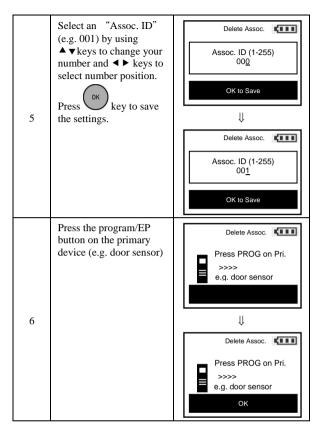

Note 1: This process will only remove the group devices/EPs from its assigned association group but will not exclude it from the network.

Change Device Configuration

This function is used to modify the parameter of the Z-Wave device via the configuration command class.

Look up the Parameter No. and Parameter Value of the target device from the device user manual before you start the below process.


Step	Setup Key	LCD Indication
1	Press and hold ◀ ► keys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter
2	Select "Advanced Setup" and press	Setup Image: Constraint of the setup > Advanced Setup > > System Settings > About > > OK to Enter >
3	Select "Configuration" and press ok key.	Advanced Setup Learning Mode Config. Assoc. > Configuration > OK to Enter
4	Use ▲ ▼keys to change your parameter number and ◀ ▶ keys to select number position, press	Configuration

5	Use ▲ ▼keys to change your parameter value and ◀ ▶ keys to select number position, press	Configuration Parameter Value +0000000000 OK to Save
	(Parameter value from - 2147483648 to +2147483647 (32bits value)	
6	Press the program button on the target device.	Configuration

Resetting Your Network

You can reset your ZRC-100 to clear all Z-Wave network and device information by the following steps:


Step	Setup Key	LCD Indication
1	Press and hold <i>◄</i> keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter ↓ Setup Add Device > Delete Device > Add to Scene > OK to Enter OK to Enter
2	Select "Advanced Setup" and press	Setup Control Advanced Setup > System Settings > About > OK to Enter
3	Select "Reset to Default" and press	Advanced Setup Reset to Default >
4	Press ► key to confirm to reset to factory default or Press ◄ key to cancel it and go back to previous page.	Reset to Default All network and device info. will be lost! ▲ NO Confirm? YES ►

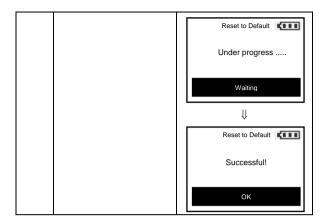

Note: After reset the remote, each device should individually perform in the section on "Delete device from the network" and "Add device to the network".

System Settings

Step	Setup Key	LCD Indication
1	Press and hold ∢ ▶ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter Setup Add Device > Delete Device > Add to Scene > OK to Enter OK to Enter
2	Select "System Settings" and press	Setup Control Advanced Setup > System Settings > About > OK to Enter

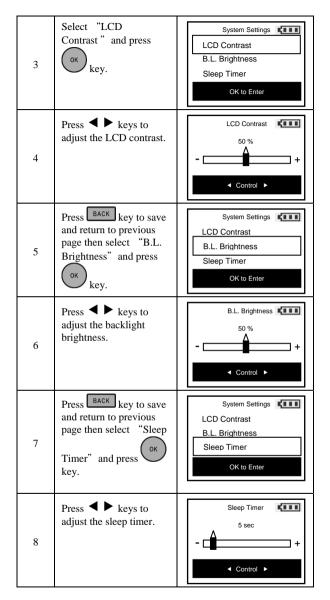

Note 1: The batteries service life will be shortened if the sleep timer set to higher value.

About ZRC-100

Step	Setup Key	LCD Indication
1	Press and hold ∢ keys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter ↓ Setup Add Device Delete Device Add to Scene OK to Enter
2	Select "About" and press ok key. It will show the firmware version on the screen.	Setup Advanced Setup System Settings About OK to Enter

Z-Wave Network Setup

Rediscover Network (N.W.)

During normal operation the network decides the best path to route signals from one device to another. If devices are moved to different positions in the installation, it is recommended to rediscover the network so the routing path will be re-configured.

Step	Setup Key	LCD Indication
1	Press and hold ▲ ✓ keys simultaneously for 3 seconds under the Home page.	Home Device > Scene > Comfort > OK to Enter U Network Setup Rediscover N.W. > Re-scan Devices > Delete Dead Node > OK to Enter
2	Select "Rediscover N.W." and press	Network Setup Image: Constraint of the setup Rediscover N.W. > Re-scan Devices > Delete Dead Node > OK to Enter >
3	The remote is updating the network information. The LCD will display OK and go back to previous page when it is completed.	Rediscover N.W. Updating 1/5 Walting Updating Updating 1/5 Updating 1/5 OK

Re-scan (Rediscover) Devices from network


In most cases, Z-Wave gateway is the primary controller (control center), all Z-Wave devices will be added / (inclusion) by the Z-Wave gateway. Normally, it is need to click the PROG button of the Z-Wave device to add into the network and one by one. The gateway will create a control page / section to Z-Wave devices. User can control / monitor Z-Wave devices under the control page.

ZRC-100 can discover all existing Z-Wave devices from the network and <u>no need to click the PROG button one by one</u>, discovered devices will be re-assigned to their default categories (Devices, Comforts and Sensors), and names will be re-assigned with default naming in ascending order which is implemented by the function of "<u>Re-scan</u> <u>Devices</u>".

To implement this function, your ZRC-100 is needed to follow below steps:


- 1) Assume all Z-Wave devices have been added by gateway.
- ZRC-100 should act as a secondary controller (receive all network and device information from a primary controller), please refer to "Learning Mode" section in this manual.
- 3) Execute the "Re-scan Devices" function with below steps.

Step	Setup Key	LCD Indication
1	Press and hold ▲ weys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter Wetwork Setup Rediscover N.W. Re-scan Devices Delete Dead Node OK to Enter
2	Select "Re-scan Devices" and press	Network Setup Rediscover N.W. Re-scan Devices Delete Dead Node OK to Enter

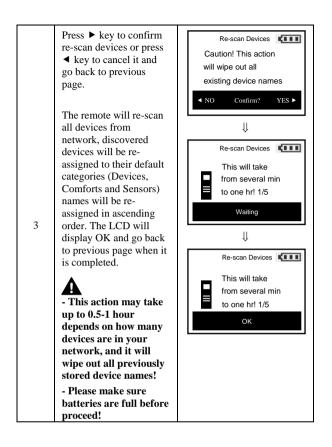

Delete Dead Node from Network

Step	Setup Key	LCD Indication
1	Press and hold ▲ weys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter W Rediscover N.W. Re-scan Devices Delete Dead Node OK to Enter
2	Select "Delete Dead Node" and press	Network Setup Image: Constraint of the setup Rediscover N.W. > Re-scan Devices > Delete Dead Node > OK to Enter
3	The remote is checking the dead node. The LCD will display OK and go back to previous page when it is completed.	Delete Dead Node Checking Checking 1/5 Watting Delete Dead Node Checking Checking 1/5 OK

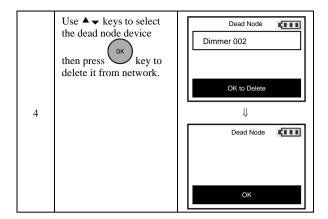

Note 1: Only the Primary Controller can be used to include or delete devices from a network. It is recommended that you mark the primary controller for each network for ease in modifying your network.


Listening Mode

There are multiple usages by entering this mode:

- Version command class: To get application software version, the Z-Wave protocol version and the supported Z-Wave command version of this controller.
- Manufacturer command class: To get the manufacture ID, product type ID and the product ID of this controller.
- Scene configuration command class: Home gateway can bundle a scene ID to a group ID using this command.
- Association command class: To create and maintain associations in this remote.

Step	Setup Key	LCD Indication
1	Place the two controllers close to each other.	_
	Press and hold $\blacktriangle \checkmark$ keys	Home
	simultaneously for 3 seconds under the Home	Device >
2	page.	Scene >
		Comfort >
		OK to Enter

(

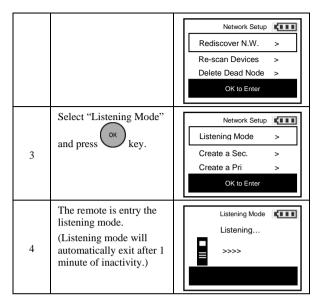

Note1: The mode must not be exited during communication process with another controller. Please wait for entire communication process to be completed.


Note2: It is not allowed to enter any user input from the remote's hard key after entry this Mode.

Create a Secondary Controller

(Copying Network Information to a Secondary Controller)

You can add a secondary controller to your network and copy all of your primary controller's network information to the secondary controller by following the steps below.

Step	Setup Key	LCD Indication
1	Place the two controllers close to each other.	-
2	Press and hold ▲ ✓ keys simultaneously for 3 seconds under the Home page.	Home Device Scene Comfort OK to Enter

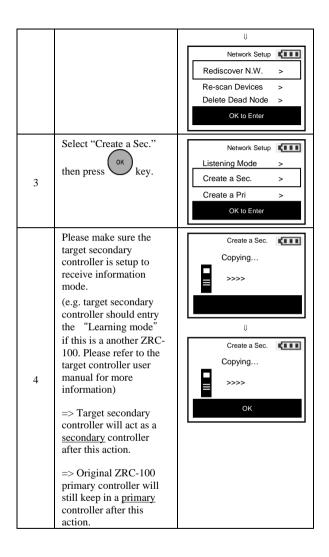

Create a Primary Controller

(Transferring Only Network Information to a New Primary Controller)

You can just transfer network information to another remote so that it will act as a new primary remote. This <u>primary shift</u> is done by following the steps below.

Step	Setup Key	LCD Indication
1	Place the two controllers close to each other.	-
2	Press and hold ▲ weys simultaneously for 3 seconds under the Home page.	Home Certification of the term of the term of the term of term
3	Select "Create a Pri." then press ok key.	Network Setup Listening Mode Create a Sec. Create a Pri OK to Enter
4	Please make sure the target primary controller is setup to receive information mode. (e.g. target primary controller should entry the "Learning mode" if this is a another ZRC- 100. Please refer to the target controller user manual for more information) => Target primary controller will act as a <u>primary</u> controller after this action. => Original ZRC-100 primary controller will act as a <u>secondary</u> controller after this action.	Create a Pri.

WIRELESS INFORMATION

Wireless range:

This device has an open air line of sight transmission distance of 100 feet which complies with the Z-Wave standards. Performance can vary depending on the amount of objects in between Z-Wave devices such as walls and furniture. Every Z-Wave device set up in your house will act as a signal repeater allowing devices to talk to each other and find alternate routes in the case of a reception dead spot.

Radio frequency limitations:

- 1. Each wall or object (i.e.: refrigerator, bookshelf, large TV, etc) can reduce the maximum range of 65 feet by up to 25 to 30%.
- Plasterboard and wooden walls block less of the radio signal then concrete, brick or tile walls which will have more of an effect on signal strength.
- 3. Wall mounted Z-Wave devices will also suffer a loss of range as they are housed in metal junction boxes which could reduce the range by up to 25 to 30%.

MAINTENANCE

- 1 Do not expose your remote to dust, strong sunlight, humidity, high temperatures or mechanical shocks.
- 2 Do not use old and new batteries together as old batteries tend to leak.
- 3 Do not use corrosive or abrasive cleansers on your remote.
- 4 Keep the unit dust free by wiping it with a soft, dry cloth.
- 5 Do not disassemble your remote controller, it contains no userserviceable parts.

FREQUENTLY ASKED QUESTIONS

Z-Wave Frequently Asked Questions

- Q Why won't my remote work with the Z-Wave devices I purchased from another country?
- A Due to different countries regulations Z-Wave products from different regions are set to different frequencies. Before purchasing new devices make sure you have checked that the device is compatible in your region.
- Q Do I need an electrician to install Z-Wave products in my house?
- A Installation can be simple. In some cases all you need to do is attach the Z-Wave plug in module into the wall socket. For more advanced in-wall modules you may need this done by a qualified technician.

61)

Q What can the Remotec ZRC-100 do for me?

A A single Z-Wave network can include 232 nodes. If necessary, more than one network can be bridged to extend the number of nodes further, although this is normally not needed in a residential environment.

The total number of controllable End-point (EP) / device / sensor is 128 items which is listed on the "Device" and "Sensor" page. ZRC-100 also supports 6 thermostats which are listed on the "Comfort" page. You can control up to 12 scenes (Scene On/Off) with your ZRC-100. Each Scene supports up to 32 Z-Wave devices or End-point (EP).

It is able to control the Z-Wave lighting devices (Dimmer or Switch) with multi-channel, window shades, thermostats, Z-Wave to AC IR extender and door lock. Also, it is support Multi-level Sensor and that can show the current room temperature on the screen.

- Q If my Z-Wave devices had already added into my Z-Wave gateway (primary controller) network, what should I do for my ZRC-100? How to copy my scenes settings to my ZRC-100?
- A Your ZRC-100 can act as a <u>secondary controller</u> with network information about other devices and scenes setting acquired from your gateway (primary controller).

Please refer to user manual with below steps:

- ZRC-100 should enter the "Learning Mode" [step of B11.1] (Replicating All Network and Device Information from a Primary Controller to your ZRC-100), for details please refer to ZRC-100 user manual.
- Make sure the gateway scenes were mapped to your Scene ID number and activated event for Scene Controller. You may need to setup the trigger settings on gateway before next steps.
- iii) Gateway should enter the "<u>Inclusion Mode</u>" to add the ZRC-100 into the network and replicating all network and device information from a primary controller to your ZRC-100, please refer to gateway user manual.
- iv) Now, ZRC-100 will act as a secondary controller. All scenes and device node information will transfer from gateway to ZRC-100, you can On/Off the scene through ZRC-100 [step of A3.1].
- Your ZRC-100 will acquire scene configuration and node information only. That means you have scene copied from gateway but you need to include individual Z-Wave device by ZRC-100 if you want to use ZRC-100 to control them individually.

- Q Can I include all Z-Wave devices from the network by ZRC-100 and no need to click the PROG button for each device?
- A Yes! ZRC-100 provides a useful function which is "Re-scan Devices" that allows rediscovering all Z-Wave devices from the network.

Please refer to user manual with below steps:

- i) Assume all Z-Wave devices have been added by gateway.
- ii) ZRC-100 should act as a secondary controller [step of B11.1].
- iii) Execute the "Re-scan Devices" function [step of C3].

ZRC-100 will rediscover Z-Wave devices from the network, discovered devices will be re-assigned to their default categories (Devices, Comforts and Sensors), and <u>names will</u> <u>be re-assigned with default naming in ascending order</u>.



 This action may take up to 0.5-1 hour depends on how many devices are in your network, and it will wipe out all previously stored device names!
 Please make sure batteries are full before proceed!


- iv) Now, all Z-Wave devices will appear on the Device, Comfort and Sensor categories. You can rename your device individually if needed.
- Q Can I use 2 or more ZRC-100 controllers in my house at one time?
- A You can use multiple ZRC-100 around your house by assigning one remote to be the primary remote and have an additional secondary controller.

Q What is multi-channel device?


A The multi-channel command class used to control one or more end points in a given device that supports this command class.

There are several kinds of multi-channel products in the market such as Z-Wave wall switch / dimmer and power strip. It is able to control the end-point individually.

Z-Wave wall switch / dimmer

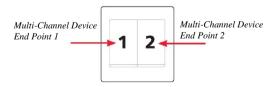

Z-Wave power strip

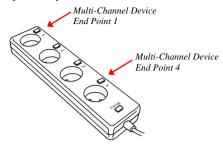

Please refer to the target device user manual for more information such as Inclusion / Exclusion and add End Point to a Scene / Group.



Some multi-channel device in the market may lack of the capability to report Multi-Channel Capability Report (MCCR) for each end point (channel).

(The MCCR is used to determine what node shall receive the association commands containing what node in the network it shall be associated to.)

In this case, the multi-channel device can only be individually controlled by ZRC-100 under Device Menu, it can not be individually assigned to different scenes, and neither can it be associated to primary sensors (e.g. door/window sensor).

There are many brands can supports multi-channel with MCRR in the market such as Merten, MK Astral, Fibaro, etc...

If you want to assign individual end-point (channel) to different scene or make individual Association with other devices, we recommend you to check with your local dealer to make sure the multi-channel device can report Multi-Channel Capability Report (MCCR) for each end point.

Q Why do I need a different module for outdoor lighting?

The outdoor module is designed to withstand various weather Δ conditions including heat, rain and snow.

Q If I lost my ZRC-100 will I also lose my settings?

Yes and no, if you lose your primary ZRC-100 you will need to Α add all the Z-Wave devices to your new primary remote again. If you lose the secondary one you can replicate all the Z-Wave setup information from your primary remote onto a new secondary remote

- Q Where can I keep up to date with the latest Z-Wave products for my house?
- A You can keep up to date by visiting the <u>www.remotec.com.hk</u> website where we will have information and ideas for using Z-Wave technology.
- Q How do I know which product is compatible to my ZRC-100 remote?
- A You can check either the specifications in the manual of your remote or also check online at <u>www.remotec.com.hk</u> for a full list of products that can be used with your remote. All Z-Wave products also come with the Z-Wave logo.

65)



- Q Can the ZRC-100 also operate Zigbee products?
- A The ZRC-100 is not compatible with any Zigbee product.

TECHNICAL SPECIFICATIONS

Model No.	BW8380US (ZRC-100US)
Model No.	BW8380EU (ZRC-100EU)
Model No.	BW8380AU (ZRC-100AU)
Model No.	BW8380IN (ZRC-100IN)
RF Frequency	908.4MHz (US)
RF Frequency	868.4MHz (EU)
RF Frequency	921.4MHz (AU)
RF Frequency	865.2MHz (IN)
LCD	FSTN Positive Transflective 128x64 dots at A.A.= 35.8x21.7mm
LCD and key pad backlight color	Amber
Max. Range	up to 100ft outdoor line of sight, in unobstructed environment
Power	Dry cell AAA x 4pcs
Temperature	operation: 0~40°C storage: -20~60°C
Dimension (LxWxT)	161mm x 52mm x 15mm
Weight	75g (Batteries excluded)

Z-Wave device type

Basic Device Class: BASIC_TYPE_CONTROLLER

Generic Device Class: GENERIC_TYPE_GENERIC_CONTROLLER

Specific Device Class: SPECIFIC_TYPE_PORTABLE_SCENE_CONTROLLER

Z-Wave Command Class	Controlled	Supported
COMMAND_CLASS_BASIC	YES	YES
COMMAND_CLASS_SWITCH_ALL	YES	NO
COMMAND_CLASS_SWITCH_MULTILEVEL	YES	NO
COMMAND_CLASS_SCENE_ACTIVATION	YES	NO
COMMAND_CLASS_SCENE_CONTROLLER_CONF	YES	YES
COMMAND_CLASS_THERMOSTAT_MODE	YES	NO
COMMAND_CLASS_THERMOSTAT_SETPOINT	YES	NO



COMMAND CLASS THERMOSTAT FAN MODE	YES	NO
COMMAND CLASS SENSOR BINARY	YES	NO
COMMAND CLASS SENSOR MULTILEVEL	YES	NO
COMMAND CLASS CONTROLLER REPLICATION	NO	YES
COMMAND_CLASS_ASSOCIATION	YES	YES
COMMAND_CLASS_MULTI_CHANNEL	YES	NO
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION	YES	YES
COMMAND_CLASS_VERSION	NO	YES
COMMAND_CLASS_CONFIGURATION	YES	NO
COMMAND_CLASS_MANUFACTURER_SPECIFIC	NO	YES
COMMAND_CLASS_WAKE_UP	NO	YES
COMMAND_CLASS_DOOR_LOCK	YES	NO
COMMAND_CLASS_SECURITY	YES	YES

CHECKING THE ACCESSORIES

After opening the cover of the packing box, check that the following accessories are included.

- ZRC-100 Z-Wave Remote Controller
- ZRC-100 Quick Setup Guide
- ZRC-100 User Manual (download from our website)

FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNINGS

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- RISK OF FIRE
- RISK OF ELECTRICAL SHOCK
- RISK OF BURNS

Exercise extreme caution when using Z-Wave devices to control appliances. Operation of the Z-Wave device may be in a different room then the controlled appliances, also an unintentional activation may occur if the wrong button on the remote is pressed. Z-Wave devices may automatically be powered on due to timed event programming. Depending upon the appliance, these unattended or unintentional operations could possible result in a hazardous condition. For these reasons we recommend the following:

 Do not include Z-Wave devices to control electric heaters or other appliances which may present a hazardous condition due to an unattended or unintentional or automatic power on control.

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available.

CAUTION

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE
- DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

www.remotec.com.hk

